



ViaRadar II
Speed Sensor
Technical Manual
02-2014-00 via



Viatronics Corp
Merikotkantie 10 LH 1
67200 Kokkola,
Finland
Tel: +358 207 528 570
Fax: +358 207 528 579
www.viatronics.eu



Regulatory Statement

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Changes or modifications not expressly approved by Applied Concepts, Inc. could void the user's authority to operate the equipment.

Not intended or approved for Law Enforcement use in the United States.

Viatronics Corp
Kokkola, finland

Tel: +358 207 528 520

www.viatronics.fi



Table of Contents

1	Overview	5
2	Specification	6
3	Physical characteristics.....	7
3.1	Package dimensions.....	
3.2	Electrical connections	8
4	Connecting the Speed Sensor	
4.1	Connecting to the COM Ports.....	
4.1.1	COM2 – RS-232 Full Duplex Port.....	9
4.1.2	COM1 and COM3 – RS-485 Ports.....	10
4.2	Auxiliary Relay Connections.....	12
5	Custom Applications to Control Speed Sensors.....	12
6	Streaming Speed Data Protocols	1
6.1	A Format – Single Visual Speed Only	14
6.2	B Format – All Visual Speeds + Status	1
6.3	D0 Format – Strong Visual Speed Only, Optional Direction Byte	16
6.4	D1 Format – Strong Visual Speed Only, Optional Direction Byte, Checksum.....	16
6.5	D2 Format – Strong Visual Speed Only, Optional Direction Byte, Tenths.....	17
6.6	D3 Format – Strong Visual Speed Only, Optional Direction Byte, Relative Amplitude, Tenths.....	18
6.7	D4 Format – Strong Visual Speed Only.....	18
6.8	Enhanced Output Format – Hex All Visual Speeds, Status	19
6.9	S Format – ASCII Visual Speeds + Status	21
6.10	BT Format – ASCII Timestamp from the unit’s internal real-time clock	22
6.11	DT Format – ASCII Date/Time stamp from the unit’s internal real-time clock.....	23
6.12	DBG1 Format – ASCII information for all tracked statistics targets.....	24
6.13	LOG Message – ASCII information for statistics targets as they are lost	25
7	Handshake Speed Data Protocols	26
7.1	EE Polling.....	2
7.1.1	EE Format Request (from Controller to Speed Sensor).....	27
7.1.2	EE Format Response (from Speed Sensor to Controller).....	27
7.2	EA Polling.....	27
7.2.1	EA Polling Request (from Controller to Speed Sensor)	27
7.3	Polled Mode for D0-D4 Formats	28
8	Configuration Setting Descriptions.....	28
8.1	Basic Configuration.....	28
8.2	COM Ports	2
8.3	Target Recognition	33
8.4	Target Filtering.....	3
8.5	Speed Presentation	35
8.6	Locking Targets	36
8.7	Real-time Clock.....	37
8.8	Speed Alarm	3
8.9	Traffic Statistics (stats unit only).....	38
8.10	System.....	41
9	Configuration Settings Table	42



ViaRadar Stationary Speed Sensor II Technical Manual

10	Configuration Protocol	46
11	FCC Requirements.....	48



1. Overview

The Viaradar II Stationary Speed Sensor is a complete Doppler Radar in a small, rugged housing. Its direction sensing capabilities and its feature-rich onfiguration settings allow it to filter out undesired targets and focus on your target of interest. The Stationary Speed Sensor II connects to the serial port on a PC or other controller via an RS-232 or RS-485 link. This interface is used to configure the unit and to monitor the speed data it sends out. The Stationary Speed Sensor can be configured to report the speeds of targets it acquires in many formats – from short ASCII character strings to larger data packets with speed and status information.

The RS-232 port can stream speed data and monitor for commands from the controller at the same time. When configured for a four-wire connection, an RS-485 port can also send and receive data at the same time. When configured for a two-wire connection however, RS-485 ports only communicate one way at a time; they never stream data as a slave on the link. They only respond to commands and speed requests from the controller. RS-485 links have the benefit of operating over longer cable distances from the controller, and also multiple RS-485 units can be installed in a point-to-multipoint configuration and controlled from a single serial port on a controller.

The compact, waterproof unit can be mounted almost anywhere. Just supply 10-45 VDC power, and the Stationary Speed Sensor produces serial speed data configured for your application.



2 Specification

GENERAL SPECIFICATIONS

Product Type	Stationary Doppler Radar Speed Sensor
Processor	Digital Signal Processor
Operating Temperatures	-30°C to +70°C (-22°F to +158°F), 90% relative humidity
Storage Temperatures	-40°C to +85°C (-40°F to +185°F)

MICROWAVE SPECIFICATIONS

Operating Frequency	24.125 GHz (K-band)
Frequency Stability	±50 MHz
Antenna Type	Planar array
3 db Beam Width	30 by 32°
Power Output	18 dBm EIRP

ELECTRICAL SPECIFICATIONS

Supply Voltage	10 - 45 VDC 12 - 35 VAC
Current (at 12 VDC nominal)	Transmitter On: 85 mA Transmitter Off: 40 mA

PHYSICAL SPECIFICATIONS

Weight	13 oz (0.35 kg)
Size (LxWxH)	4.4 x 3.9 x 1.6 inches 11.2 x 9.9 x 4 cm
Case Material	Aluminum die cast


PERFORMANCE SPECIFICATIONS

Stationary Speed Range	Max target speed: 200 MPH (322 km/h, 174 knots, 89 meters/sec, 293 feet/sec)
Accuracy	±.5 MPH ±0.3%, (±.8 KPH ±.3%) In ones resolution, speeds are rounded to nearest integer. In tenths resolution, speeds are rounded to nearest tenth.



3 Physical characteristics

3.1 Package dimensions

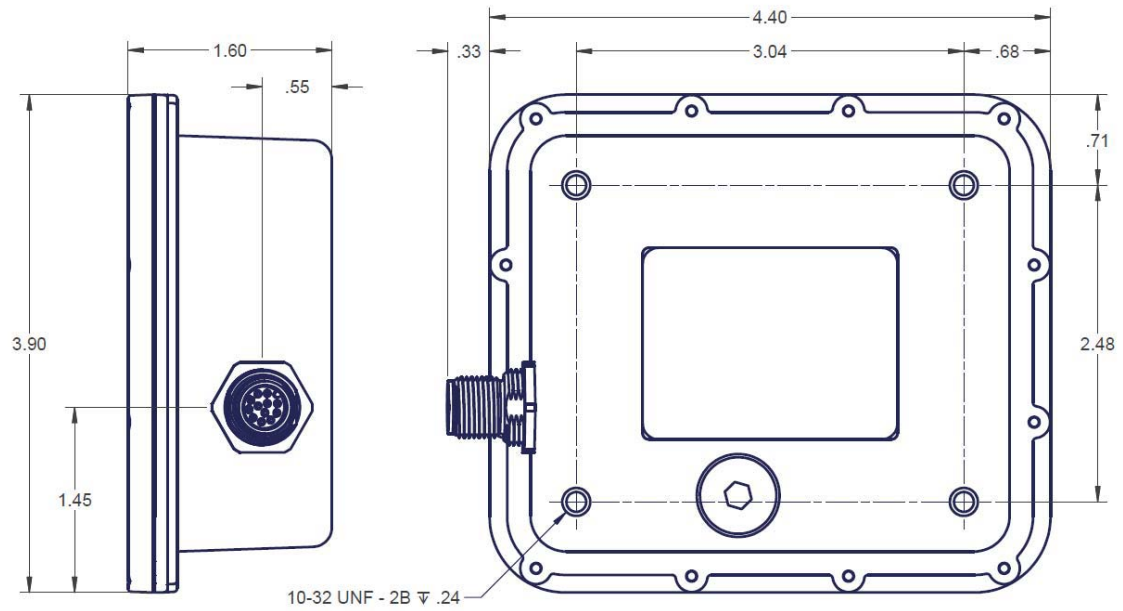




3.2 Electrical connections


Use the table below to identify the electrical connections in the external connector.

Pin Number	Wire Color	Primary Function	Secondary Function
1	Brown	AC Power (factory only option)	Com 2, RS-232 RTS
2	Red	AC Power (factory only option)	Com 2, RS-232 CTS
3	Orange	Com 2, RS-232 RX (From Computer)	
4	Yellow	Com 1, RS-485 TX-, Full Duplex	Com 3, RS-485 T/R-, Half Duplex
5	Dark Green	DC POWER	
6	Blue	AUX Relay	
7	Violet	AUX Relay	
8	Gray	Com 1, RS-485 RX+, Full Duplex	Com 1, RS-485 T/R+, Half Duplex
9	Black	Com 1, RS-485 RX-, Full Duplex	Com 1, RS-485 T/R-, Half Duplex
10	White	Com 1, RS-485 TX+, Full Duplex	Com 3, RS-485 T/R+, Half Duplex
11	Pink	Com 2, RS-232 TX (To Computer)	
12	Light Green	GROUND	

The diagrams below shows the pin out of the cable and sensor connectors as mated.

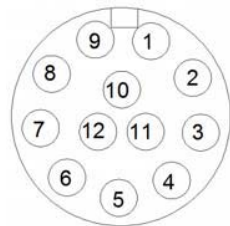

CABLE CONNECTOR, MATING END VIEW.

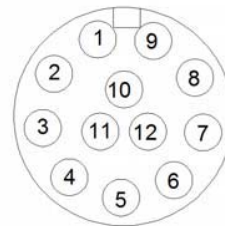

SENSOR CONNECTOR, MATING END VIEW.

The columns in the table below show pins used for different connection options.

Pin Number	Wire Color	RS-485 Full Duplex	RS-485 Half Duplex	RS-232
1	Brown			Com 2, RTS (when selected)
2	Red			Com 2, CTS (when selected)
3	Orange			Com 2, RX (from computer)
4	Yellow	Com 1, TX-	Com 3, T/R-	
5	Dark Green	DC Power	DC Power	DC Power
6	Blue	Relay (optional)	Relay (optional)	Relay (optional)
7	Violet	Relay (optional)	Relay (optional)	Relay (optional)
8	Gray	Com 1, RX+	Com 1, T/R+	
9	Black	Com 1, RX-	Com 1, T/R-	
10	White	Com 1, TX+	Com 3, T/R+	
11	Pink			Com 2, TX (to computer)
12	Light Green	Ground	Ground	Ground



4 Connecting the Stationary Speed Sensor


4.1 Connecting to the COM Ports

There are three standard COM ports on the Stationary Speed Sensor II. COM1 is an RS-485 port which can be either 4-wire full-duplex or 2-wire half-duplex. COM2 is a 2-wire full-duplex RS-232 port which can have RTS/CTS hardware flow control enabled. COM3 is a 2-wire half-duplex RS-485 port. Depending on the unit's configuration one, two or three COM ports may be used at the same time. The factory default configuration has COM1 as a 4-wire full-duplex RS-485 port, COM2 as a 2-wire full-duplex RS-232 port, and COM3 is disabled. This default configuration allows COM1 and COM2 to be used simultaneously.

All Stationary Speed Sensor II COM ports are configured for 10 bit asynchronous serial communications with 1 start bit, 8 data bits, 1 stop bit and no parity (8N1). This is standard for PC serial ports, but a custom controller may need to be modified to match these settings. COM1 and COM3, the RS-485 ports, have inter-dependencies, so COM 2 is discussed first below.

4.1.1 COM2 - RS-232 Full Duplex Port

COM2 is the simplest port to connect and configure. It provides a standard RS-232 port with Transmit Data (TX) and Receive Data (RX) signals relative to its ground (GND) as shown in the diagram below.

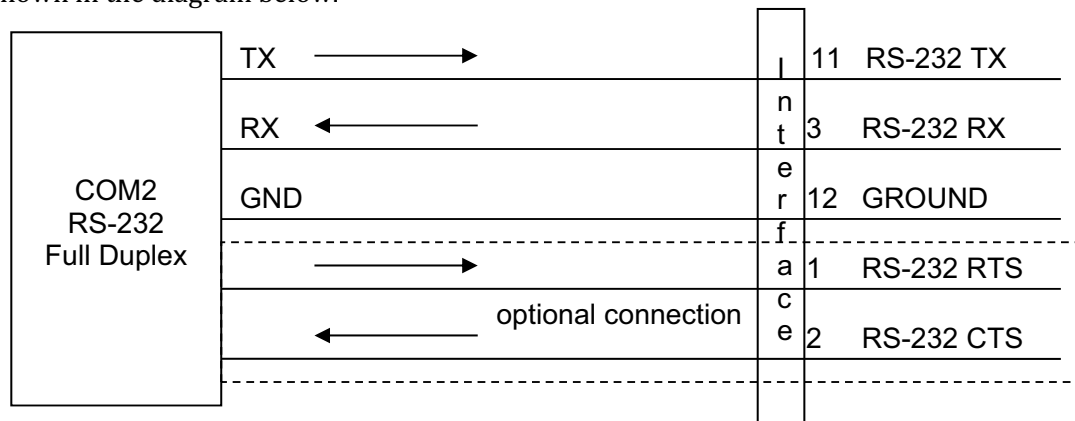

The sensor transmits data by changing the voltage level on the TX wire relative to GND. The TX wire should be connected to the receive signal on the PC/controller, and the GND should be connected to the controller's GND signal. The controller receives the data on its end by sensing the voltage changes relative to GND.

In a like manner, the controller's TX signal is connected to the sensor's RX, and the sensor receives controller data by sensing the voltage changes on that wire relative to the same ground. Because there are the two separate signals (TX and RX), the link is defined as **full-duplex** meaning that the data signals can flow in both directions at the same time without corrupting each other.

A limitation on RS-232 links is distance. The sensor and controller can communicate over cables – but only so far. Since received data is sensed as a voltage relative to the link's ground signal, as the cable gets longer, the received voltage changes get lower and noisier



ViaRadar Stationary Speed Sensor II Technical Manual

and become harder to detect reliably resulting in degraded communications. This distance can be affected by wire size in the cable, crosstalk between wires in the cable as well as routing the cable through noisy environments.

In addition to the data signals, a pair of hardware handshaking signals (RTS and CTS) is optionally available through sensor configuration. When configured and connected, the Stationary Speed Sensor II can activate the Request-To-Send signal toward the PC/controller when it wants to transmit data. The controller then responds with activation of the Clear-To-Send signal to let the sensor know it can transmit. As above with the data signals, these handshaking signals also degrade over distance. If the unit is configured with the AC power option, then hardware handshaking with RTS and CTS is unavailable.

Most newer PCs are not configured with the older 9-pin D serial ports and have USB ports instead. In these cases, acquire a USB to serial port adapter to perform the necessary conversion. These products vary and may or may not work well. In some cases they provide undesirable buffering and delay, and a different brand should be used.

4.1.2 COM1 and COM3 – RS-485 Ports

RS-485 ports differ from RS-232 in that RS-485 uses a pair of wires with no ground for each direction of transmission instead of the RS-232 method of using one wire for each direction relative to a shared ground. Instead of generating or sensing a voltage level relative to ground like RS-232, RS-485 transmits data by changing the direction of current flow in the loop created by its two wires. Although still affected by noisy environments, RS-485 links can operate over longer distances than RS-232 because the receivers are not trying to measure smaller and smaller voltages relative to a noisier and noisier ground as the distances increase. They just have to measure the direction of the current flow on a closed loop.

RS-485 links can be implemented in a 4-wire or a 2-wire implementation. With four wires, the link is **full-duplex** because one pair of wires can be used to send data one way, and the other pair can be used to send data the other way permitting two-way simultaneous communication.

With only two wires, the two ends of the link must coordinate their sending of data so that only one end transmits at a time. On this **half-duplex** link, if both ends try to transmit at the same time, the communications will be garbled and neither end will be able to receive a clean signal.


To prevent messages in the two directions from colliding, the RS-485 half-duplex protocol requires that there be a master on one end of the link and a slave on the other. A Stationary Speed Sensor II always acts as the slave device, and the controller is always the master. On a half-duplex link the Stationary Speed Sensor II only answers commands or requests for speeds from the controller. It never sends any data without receiving a request first, and it never streams speed data.

The Stationary Speed Sensor II has two RS-485 ports: COM1 and COM3. COM1 can be configured to be 4-wire full-duplex or 2-wire half-duplex. COM3 is always a 2-wire half-duplex port. They share internal connections to only four pins on the main connector, so either COM1 can be 4-wire while COM3 is disabled, or they can both be 2-wire ports.




4.1.2.1 COM1 – RS-485 Full Duplex Port

The default configuration for the COM1 port is 4-wire as shown below. The two wires for the transmit data are TX+ and TX-, and the two wires for the receive data are RX+ and RX-. Notice that since there is a pair of wires for each direction, both the sensor and the controller can transmit and receive at the same time creating a **full-duplex** link. In this configuration, COM3 can not be used and is disabled.

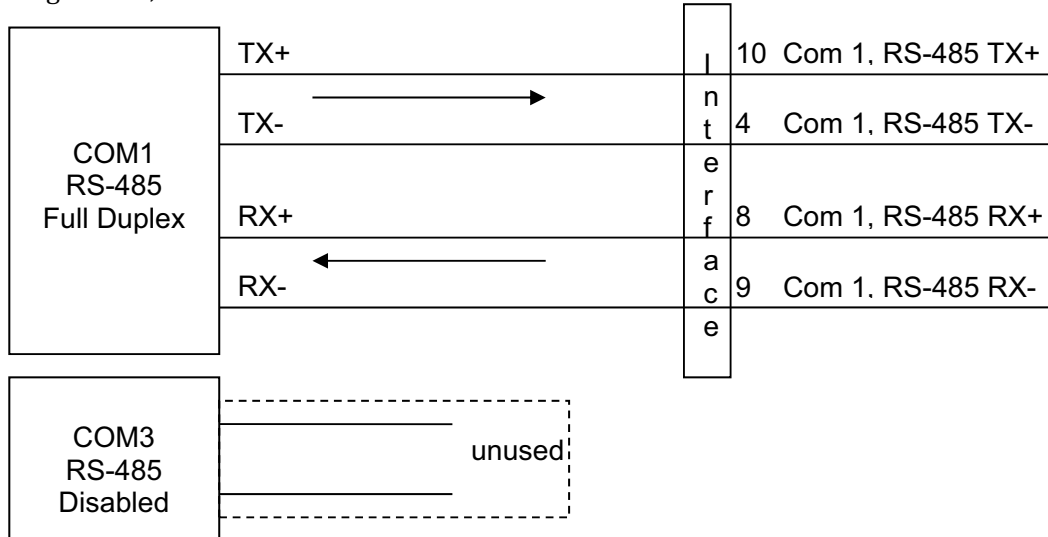

4.1.2.2 COM1 and COM3 – RS-485 Half Duplex Ports

The 2-wire half-duplex implementation on COM1 is shown below. In this configuration, there is only one pair of wires COM1+ and COM1- which is used for both directions of communication. Since the second pair of signals on COM1 is unused, COM3 may be enabled and connects to the other two pins on the connector as a second, independent half-duplex port.

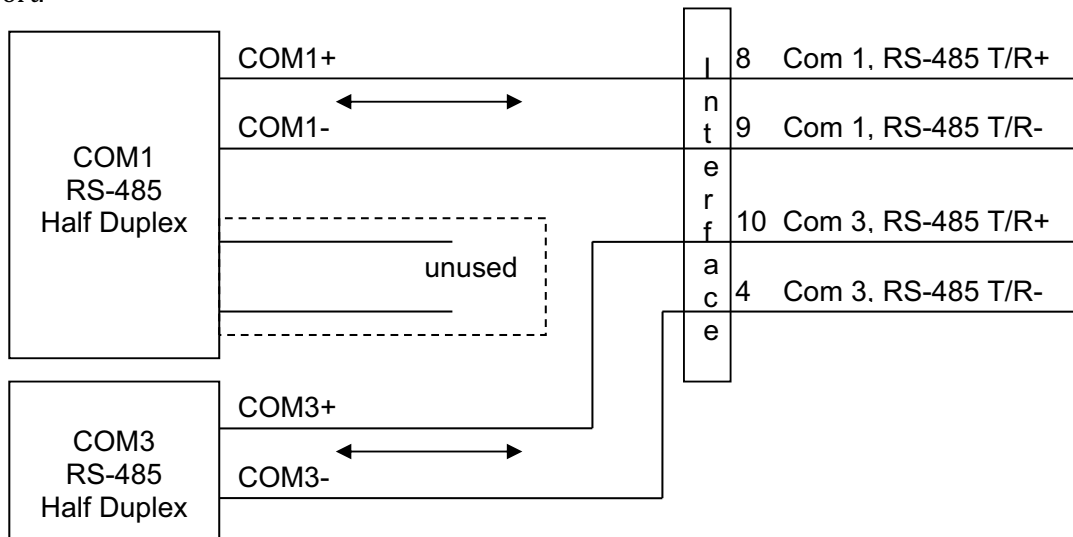



4.2 Auxiliary Relay Connections

The AUX Relay Contacts, pins 6 and 7 of the interface connector, provide a contact closure interface. The sensor can internally short these pins together or leave them in their normal state of an open circuit. This interface is used by the Stationary Speed Sensor II to implement a Speed Alarm feature which is described in more detail in the Speed Alarm section of Section 8.

5 Custom Applications to Control the Stationary Speed Sensor II

Using the configuration protocol described in Section 10, a designer can “get” the current value of a setting from the unit, “set” the setting to a new value or “change” (increment) the value. When a PC or other controller sends a configuration command packet to the Stationary Speed Sensor II, the Stationary Speed Sensor II responds immediately with a packet in the same format. The only values changed in the returned packet are the Destination ID, Source ID, Configuration Value and the Checksum bytes. The Payload Length may also change depending on the length of the returned Configuration Value.

The PC/controller is always defined to be the master (ID = 0x01) so commands from the controller will always have 0x01 as the Source ID, and responses from Stationary Speed Sensor IIs will always have 0x01 as the Destination ID.

The default Unit ID for Stationary Speed Sensor IIs is 0x02 and need not be changed on point-to-point links between a sensor and a PC/controller – whether on an RS-232 or RS-485 port.

Multiple units using RS-485 ports can work simultaneously on a single link to the controller in a point-to-multipoint configuration. The ID of each one must be unique and in the range of 2-254 (0x02 – 0xFE). ID 0 is undefined and should not be used. ID 255 (0xFF) is the broadcast address. Every unit on the link acts on commands sent to ID 255, so a controller can, for example, turn all the radar transmitters on or off with a single command. Be aware that each unit also sends a response packet to a broadcast command, and that the responses are likely to be garbled on the shared link. For this reason, always disregard responses to broadcast commands unless there is only one Stationary Speed Sensor II on the link. If the response from a single unit on a multipoint link is desired, always address that unit in the command.

Another good use for a broadcast command is to find out the ID of a Stationary Speed Sensor II that may not be responding to its expected address. Make sure the unit is the only one on the link, and send the Get Stationary Speed Sensor II Address command (1/116) to



ViaRadar Stationary Speed Sensor II Technical Manual

the broadcast Destination ID 255 (0xFF). As long as the baud rate is correct, the unit will respond back using its ID as the Source ID in the response packet.

All of the configuration methods (get, change and set) use the same packet format defined in Section 10. The differences are in the use of the Command ID and the Configuration Value fields.

- The “change” command and the “get” command are similar in that the Command ID field is set equal to the Setting ID (in hex) from the list of settings in Section 9.
 - For a “change” command, the Configuration Value is set to 1 to instruct the Stationary Speed Sensor II to increment the value by 1 and return the resulting value: change(1). If the incremented value exceeds the legal range for the setting, the value rolls around to the lowest value in the range.
 - For a “get” command, the Configuration Value is set to 0 basically instructing the Stationary Speed Sensor II not to increment the current value but to simply return it. This is essentially a change(0) command.
- For a “set” command, the Command ID field is set equal to 0x80 plus the Setting ID value (in hex) from the list in Section 9 (essentially turning on the high-order bit). The Configuration Value field is set to the new desired value.

In the response packet, the Stationary Speed Sensor II inserts the value of the requested setting in the Configuration Value field. Once the Destination and Source IDs and the Configuration Value are correct, the sensor calculates a new checksum and inserts it into the packet before sending off the response.

6 Streaming Speed Data Protocols

When a streaming protocol is selected on a full-duplex port, the Stationary Speed Sensor II sends continuous speed updates in the selected output format at a specified message period. When one of these protocols is selected on a half-duplex port, the unit sends only a single message in the selected output format in response to each EA Poll from the controller. Refer to the COM Ports section in Section 8 for settings that affect the content and timing of these messages.

The following streaming protocol message formats are supported.

A – ASCII single visual speed only

B – ASCII all visual speeds + status

D0 – ASCII strong visual speed only, optional direction byte

D1 – ASCII strong visual speed only, optional direction byte, checksum

D2 – ASCII strong visual speed only, optional direction byte, tenths

D3 – ASCII strong visual speed only, optional direction byte, relative amplitude, tenths

D4 – HEX strong visual speed only

Enhanced Output – Hex all visual speeds + status

S – ASCII visual speeds + status

BT – ASCII Timestamp from the unit’s internal real-time clock

DT – ASCII Date and Timestamp from the unit’s internal real-time clock

DBG1 – ASCII information for all tracked statistics targets (stats unit only)

LOG – ASCII information for statistics targets as they are lost (stats unit only)



6.1 A Format – Single Visual Speed Only

Byte #	Description	Value
1	Speed hundreds digit (ASCII)	
2	Speed tens digit (ASCII)	
3	Speed ones digit (ASCII)	
4	Carriage Return	0x0D

A Format messages are 4 bytes in length. The baud rate setting must be 1200 or greater to ensure that a complete message is sent before the radar processes a new message to send.

Use the Format A Speed setting for the desired port to select the Strong visual target or the Fast visual target to be sent in this message.

When the Unit Resolution (Setting 1/21) is set for tenths, the speed reported is multiplied by ten: 58.5 MPH is reported as 585. The decimal point is assumed. An A Format message can carry a maximum speed in tenths of 99.9.



ViaRadar Stationary Speed Sensor II Technical Manual

6.2 B Format – All Visual Speeds + Status

Byte #	Description	Value
1	Message Type	0x81
2	Status 1	<i>(see detail below)</i>
3	Status 2	<i>(see detail below)</i>
4	unused	0x20 (space) or 0x30 (ASCII 0)
5	unused	0x20 (space) or 0x30 (ASCII 0)
6	unused	0x20 (space) or 0x30 (ASCII 0)
7	Locked speed hundreds digit (ASCII)	
8	Locked speed tens digit (ASCII)	
9	Locked speed ones digit (ASCII)	
10	Fast speed hundreds digit (ASCII)	
11	Fast speed tens digit (ASCII)	
12	Fast speed ones digit (ASCII)	
13	Target speed hundreds digit (ASCII)	
14	Target speed tens digit (ASCII)	
15	Target speed ones digit (ASCII)	
16	Carriage Return	0x0D

Status 1 byte

Bit 7-6:	always = 01 (to force displayable ASCII characters)
Bit 5:	lock status (0=no speed locked, 1=speed locked)
Bit 4:	zone (0=closing, 1=away/both)
Bit 3:	always = 0
Bit 2:	always = 0
Bit 1:	always = 1
Bit 0:	transmitter status (0=off, 1=on)

Status 2 byte

Bit 7-6:	always = 01 (to force displayable ASCII characters)
Bit 5-4:	always = 00
Bit 3:	fast lock status (0=no fast speed locked, 1=fast speed locked)
Bit 2:	fast status (0=faster disabled, 1=faster enabled)
Bit 1:	always = 0
Bit 0:	always = 0

B Format messages are 16 bytes in length. The baud rate setting must be 4800 or greater to ensure that a complete message is sent before the radar processes a new message to send.

When the Unit Resolution (Setting 1/21) is set for tenths, the speeds reported are multiplied by ten: 58.5 MPH is reported as 585. The decimal point is assumed. A B Format message can carry a maximum speed in tenths of 99.9.



ViaRadar Stationary Speed Sensor II Technical Manual

6.3 D0 Format – Strong Visual Speed Only, Optional Direction Byte

Byte #	Description	Value
1	Optional direction byte	
2	Target speed hundreds digit (ASCII)	
3	Target speed tens digit (ASCII)	
4	Target speed ones digit (ASCII)	
5	Carriage Return	0x0D

D0 Format messages are up to 5 bytes in length. The baud rate setting must be 1200 or greater to ensure that a complete message is sent before the radar processes a new message to send.

If the direction byte is not enabled for the desired port, it is not sent, and the message will be a 4 byte message. When enabled, the direction byte is '+' for approaching, '-' for receding, and '?' for unknown.

When the Unit Resolution (Setting 1/21) is set for tenths, the speed reported is multiplied by ten: 58.5 MPH is reported as 585. The decimal point is assumed. A D0 Format message can carry a maximum speed in tenths of 99.9.

6.4 D1 Format – Strong Visual Speed Only, Optional Direction Byte, Checksum

Byte #	Description	Value
1	Optional direction byte	
2	'S'	The letter 'S' (0x53)
3	Target speed tens digit (ASCII)	
4	Target speed ones digit (ASCII)	
5	Carriage Return	0x0D
6	Checksum	

D1 Format messages are up to 6 bytes in length. The baud rate setting must be 2400 or greater to ensure that a complete message is sent before the radar processes a new message to send.

If the direction byte is not enabled for the desired port, it is not sent, and the message will be a 5 byte message. When enabled, the direction byte is '+' for approaching, '-' for receding, and '?' for unknown.

The checksum is the sum of the preceding bytes truncated to the low order 7 bits.

When the Unit Resolution (Setting 1/21) is set for tenths, the speed reported is multiplied by ten: 8.2 MPH is reported as 82. The decimal point is assumed. A D1 Format message can carry a maximum speed in tenths of 9.9. Due to this limited speed range, the tenths setting is not recommended for this format.



ViaRadar Stationary Speed Sensor II Technical Manual

6.5 D2 Format – Strong Visual Speed Only, Optional Direction Byte, Tenths

Byte #	Description	Value
1	Optional direction byte	
2	Target speed hundreds digit (ASCII)	
3	Target speed tens digit (ASCII)	
4	Target speed ones digit (ASCII)	
5	Decimal Point	0x2E
6	Target Speed tenths digit (ASCII)	
7	Carriage Return	0x0D

D2 Format messages are up to 7 bytes in length. The baud rate setting must be 2400 or greater to ensure that a complete message is sent before the radar processes a new message to send.

If the direction byte is not enabled for the desired port, it is not sent, and the message will be a 6 byte message. If enabled, the direction byte is '+' for approaching, '-' for receding, and '?' for unknown.

The Unit Resolution (Setting 1/21) should be set to tenths for this format to report speeds properly.



ViaRadar Stationary Speed Sensor II Technical Manual

6.6 D3 Format – Strong Visual Speed Only, Optional Direction Byte, Relative Amplitude, Tenths

Byte #	Description	Value
1	'*'	Asterisk (0x2A)
2	Optional direction byte	
3	Target speed hundreds digit (ASCII)	
4	Target speed tens digit (ASCII)	
5	Target speed ones digit (ASCII)	
6	Decimal Point	0x2E
7	Target Speed tenths digit (ASCII)	
8	','	Comma (0x2C)
9	Relative Amplitude hundreds digit (ASCII)	
10	Relative Amplitude tens digit (ASCII)	
11	Relative Amplitude ones digit (ASCII)	
12	Carriage Return	0x0D

D3 Format messages are up to 12 bytes in length. The baud rate setting must be 4800 or greater to ensure that a complete message is sent before the radar processes a new message to send.

If the direction byte is not enabled for the desired port, it is not sent, and the message will be an 11 byte message. If enabled, the direction byte is '+' for approaching, '-' for receding, and '?' for unknown.

Amplitude values are relative and in the range 0-160.

The Unit Resolution (Setting 1/21) should be set to tenths for this format to report speeds properly.

6.7 D4 Format – Strong Visual Speed Only

Byte #	Description	
1	0x02 (HEX)	
2	0x84 (HEX)	
3	0x01 (HEX)	
4	Target Speed (HEX)	
5	0x01 (HEX)	
6	0xAA (HEX)	
7	0x03 (HEX)	

The bytes are sent just as above, in HEX format. The only variable is speed, which is the strong target speed expressed in HEX format, e.g. 30 MPH would be sent as 0x1E. The maximum speed that can be reported in this format is 255

D4 Format messages are 7 bytes in length. The baud rate setting must be 2400 or greater to ensure that a complete message is sent before the radar processes a new message to send.

When the Unit Resolution (Setting 1/21) is set for tenths, the speed reported is multiplied by ten: 25.5 MPH is reported as 255. The decimal point is assumed. A B Format message can carry a maximum speed in tenths of 25.5



6.8 Enhanced Output Format – Hex All Visual Speeds, Status

Byte #	Description	Value
1	Start ID	0xEF
2	Destination ID	0xFF (broadcast address)
3	Source ID	0x02
4	Packet Type	0x01
5	Payload Length (LSB)	0x0D
6	Payload Length (MSB)	0x00 (length = 0x000D = 13 bytes) (bytes 7-19)
7	Command ID	0x00
8	Antenna Number	0x01
9	Target Speed (LSB)	Speed of strongest target is 16-bit number
10	Target Speed (MSB)	(see above)
11	Faster Speed (LSB)	Speed of faster target is 16-bit number
12	Faster Speed (MSB)	(see above)
13	Locked Speed (LSB)	Locked speed (strong or fast) is 16-bit number
14	Locked Speed (MSB)	(see above)
15	unused	0x00
16	unused	0x00
17	Direction	(see detail below)
18	Status	(see detail below)
19	Configuration	(see detail below)
20	Checksum (LSB)	The checksum should equal the 16-bit sum of pairs of bytes in LSB, MSB order starting with byte #1 as the first LSB through and including the last byte before the Checksum (in this case, byte #19). In the case of an odd number of bytes, 0x00 is used as the last MSB value. (See example packet below.)
21	Checksum (MSB)	(see above)

Direction byte

Bits 7-6: always = 00
 Bits 5-4: locked speed direction (0=unknown, 1=closing, 3(-1)=away)
 Bits 3-2: fast speed direction (0=unknown, 1=closing, 3(-1)=away)
 Bits 1-0: target speed direction (0=unknown, 1=closing, 3(-1)=away)

Status byte

Bit 7: always = 0
 Bit 6: always = 0
 Bits 5-3: units (000=MPH, 001=km/h, 010 = knots, 011 = meters/sec, 100 = ft/sec)
 Bit 2: transmitter status (0=off, 1=on)
 Bit 1: strong lock (1=locked speed is strongest target)
 Bit 0: fast lock (1=locked speed is faster target)

Configuration byte

Bits 7-3: always = 00000
 Bits 2-1: zone (00=away, 01=closing, 10=both closing and away)
 Bit 0: always = 0



ViaRadar Stationary Speed Sensor II Technical Manual

Enhanced Output Format messages are 21 bytes in length. The baud rate setting must be 4800 or greater to ensure that a complete message is sent before the radar processes a new message to send.

When the Unit Resolution (Setting 1/21) is set for tenths, the speeds reported are multiplied by ten: 58.5 MPH is reported as 585. The decimal point is assumed. Since the speeds are sent as hex values, an Enhanced Output Format message can easily carry the highest measurable speed of 321 km/h (or 3210 in tenths).

EXAMPLE PACKET (Enhanced Output Format)

Byte #	Description	Example Values
1	Start ID	0xEF
2	Destination ID	0xFF
3	Source ID	0x02
4	Packet Type	0x01
5	Payload Length (LSB)	0x0D
6	Payload Length (MSB)	0x00
7	Command ID	0x00
8	Antenna Number	0x01
9	Target Speed (LSB)	0x37 (55 MPH)
10	Target Speed (MSB)	0x00
11	Fast Speed (LSB)	0x4B (75 MPH)
12	Fast Speed (MSB)	0x00
13	Locked Speed (LSB)	0x37 (55 MPH)
14	Locked Speed (MSB)	0x00
15	unused	0x00
16	unused	0x00
17	Direction	0x1D
18	Status	0x06
19	Configuration	0x00
20	Checksum (LSB)	0xD4
21	Checksum (MSB)	0x08

Checksum = 0x08D4 (truncated to the low order 2 bytes) = 0xFFEF + 0x0102 + 0x000D + 0x0100 + 0x0037 + 0x004B + 0x0037 + 0x0000 + 0x061D + 0x00



ViaRadar Stationary Speed Sensor II Technical Manual

6.9 S Format – ASCII Visual Speeds + Status

Byte #	Description	Value
1	Message type	0x83
2	Faster target direction	'A' = "away", 'C' = "closing"
3	Faster target speed	Hundreds (100) '0' - '9' (ASCII)
4	(same)	Tens (10) '0' - '9' (ASCII)
5	(same)	Ones (1) '0' - '9' (ASCII)
6	(same)	Tenths (0.1) '0' - '9' (ASCII)
7	Strongest target direction	'A' = "away", 'C' = "closing"
8	Strongest target speed	Hundreds (100) '0' - '9' (ASCII)
9	(same)	Tens (10) '0' - '9' (ASCII)
10	(same)	Ones (1) '0' - '9' (ASCII)
11	(same)	Tenths (0.1) '0' - '9' (ASCII)
12	Strongest target strength	Hundreds (100) '0' - '9' (ASCII)
13	(same)	Tens (10) '0' - '9' (ASCII)
14	(same)	Ones (1) '0' - '9' (ASCII)
15	Channel signal strength ratio	Hundreds (100) '0' - '9' (ASCII)
16	(same)	Tens (10) '0' - '9' (ASCII)
17	(same)	Ones (1) '0' - '9' (ASCII)
18	Status	0x40 (see detail below)
19	Carriage return	0x0D

Status byte

Bit 7-6: always = 01 (to force displayable ASCII characters)
 Bit 5: always = 0
 Bit 4: always = 0
 Bits 3-0: always = 0

S Format messages are 19 bytes in length. The baud rate setting must be 4800 or greater to ensure that a complete message is sent before the radar processes a new message to send.

Strongest target strength values are relative and in the range 1-32.

Channel signal strength ratio is a measure of the directionality of the target. A higher number is more directional.



ViaRadar Stationary Speed Sensor II Technical Manual

6.10 BT Format – ASCII Timestamp from the unit’s internal real-time clock

Byte #	Description	Value
1	Message Type	0x81
2	Status 1	<i>(see detail below)</i>
3	unused	0x40
4	ASCII space	0x20
5	Fractional second tens digit (ASCII)	
6	Fractional second ones digit (ASCII)	
7	ASCII space	0x20
8	Second tens digit (ASCII)	
9	Second ones digit (ASCII)	
10	ASCII space	0x20
11	Minute tens digit (ASCII)	
12	Minute ones digit (ASCII)	
13	ASCII space	0x20
14	Hour tens digit (ASCII)	
15	Hour ones digit (ASCII)	
16	Carriage Return	0x0D

Status 1 byte

Bit 7-6:	always = 01 (to force displayable ASCII characters)
Bit 5:	always = 0
Bit 4:	always = 0
Bit 3:	always = 0
Bit 2:	always = 0
Bit 1:	always = 1
Bit 0:	transmitter status (0=off, 1=on)

The BT Format has the same basic format as the B Format except speeds are replaced with times. If a sensor is configured for this format and connected to a PC running the demo app, the unit’s internal real-time clock’s time is displayed in the app’s four windows: hh mm ss fs.

BT Format messages are 16 bytes in length. The baud rate setting must be 4800 or greater to ensure that a complete message is sent before the radar processes a new message to send.



ViaRadar Stationary Speed Sensor II Technical Manual

6.11 DT Format – ASCII Date/Time stamp from the unit’s internal real-time clock

Byte #	Description	Value
1	Year thousands digit (ASCII)	
2	Year hundreds digit (ASCII)	
3	Year tens digit (ASCII)	
4	Year ones digit (ASCII)	
5	ASCII slash (“/”)	0x2F
6	Month tens digit (ASCII)	
7	Month ones digit (ASCII)	
8	ASCII slash (“/”)	0x2F
9	Date tens digit (ASCII)	
10	Date ones digit (ASCII)	
11	ASCII space	0x20
12	Hour tens digit (ASCII)	
13	Hour ones digit (ASCII)	
14	ASCII colon (“:”)	0x3A
15	Minute tens digit (ASCII)	
16	Minute ones digit (ASCII)	
17	ASCII colon (“:”)	0x3A
18	Second tens digit (ASCII)	
19	Second ones digit (ASCII)	
20	ASCII decimal point (“.”)	0x2E
21	Fractional second tens digit (ASCII)	
22	Fractional second ones digit (ASCII)	
23	Carriage Return	0x0D

The DT Format message is an ASCII string showing the unit’s internal real-time clock’s date and time as follows: “2000/12/31 23:59:59.99<cr>”.

DT Format messages are 23 bytes in length. The baud rate setting must be 9600 or greater to ensure that a complete message is sent before the radar processes a new message to send.



ViaRadar Stationary Speed Sensor II Technical Manual

6.12 DBG1 Format – ASCII information for all tracked statistics targets

This format is only used in the stats unit.

Byte #	Description	Value
1	ASCII "T"	0x54
2	Target number tens digit	
3	Target number ones digit	
4	ASCII space	0x20
5	Target ID thousands digit	
6	Target ID hundreds digit	
7	Target ID tens digit	
8	Target ID ones digit	
9	ASCII space	0x20
10	Target direction – ASCII "C" for closing, "A" for away, "?" for unknown	
11	Last target speed hundreds digit	
12	Last target speed tens digit	
13	Last target speed ones digit	
14	ASCII space	0x20
15	Peak speed direction – "C", "A" or "?"	
16	Peak speed hundreds digit	
17	Peak speed tens digit	
18	Peak speed ones digit	
19	ASCII space	0x20
20	Average speed direction – "C", "A" or "?"	
21	Average speed hundreds digit	
22	Average speed tens digit	
23	Average speed ones digit	
24	ASCII space	0x20
25	Target Strength tens digit	
26	Target Strength ones digit	
27	ASCII space	0x20
28	Target duration thousands digit	
29	Target duration hundreds digit	
30	Target duration tens digit	
31	Target duration ones digit	
32	ASCII space	0x20
33	Carriage Return	0x0D

When the DBG1 Format is selected, the unit streams a 33-byte ASCII message as defined above (e.g. "T00 0018 A040 A041 A040 18 0006 <cr>") for each of the targets being tracked. If the unit is configured for tenths resolution, a decimal point and tenths digit is added to each speed value (e.g. "T00 0018 A040.1 A041.3 A040.4 18 0006 <cr>") and the message length is 39 bytes.

Since the unit can track up to 15 targets, the baud rate setting must be set at 115200 to ensure that a complete message for each target is sent before the radar processes new target information.



ViaRadar Stationary Speed Sensor II Technical Manual

6.13 LOG Message – ASCII information for statistics targets as they are lost

This format is only used in the stats unit.

Byte #	Description	Value
1	ASCII "L"	0x4C
2	ASCII "O"	0x4F
3	ASCII "G"	0x47
4	ASCII space	0x20
5	Target ID thousands digit	
6	Target ID hundreds digit	
7	Target ID tens digit	
8	Target ID ones digit	
9	ASCII space	0x20
10	Year thousands digit (ASCII)	
11	Year hundreds digit (ASCII)	
12	Year tens digit (ASCII)	
13	Year ones digit (ASCII)	
14	ASCII slash ("/")	0x2F
15	Month tens digit (ASCII)	
16	Month ones digit (ASCII)	
17	ASCII slash ("/")	0x2F
18	Date tens digit (ASCII)	
19	Date ones digit (ASCII)	
20	ASCII space	0x20
21	Hour tens digit (ASCII)	
22	Hour ones digit (ASCII)	
23	ASCII colon (":")	0x3A
24	Minute tens digit (ASCII)	
25	Minute ones digit (ASCII)	
26	ASCII colon (":")	0x3A
27	Second tens digit (ASCII)	
28	Second ones digit (ASCII)	
29	ASCII space	0x20
30	Direction first character (ASCII)	"A" or "C"
31	Direction second character (ASCII)	"W" or "L"
32	Direction third character (ASCII)	"A" or "O"
33	Direction fourth character (ASCII)	"Y" or "S"
34	ASCII space	0x20
35	ASCII "L"	0x4C
36	Last target speed hundreds digit	
37	Last target speed tens digit	
38	Last target speed ones digit	
39	ASCII space	0x20
40	ASCII "P"	0x50
41	Peak target speed hundreds digit	
42	Peak target speed tens digit	
43	Peak target speed ones digit	
44	ASCII space	0x20
45	ASCII "A"	0x41



46	Average target speed hundreds digit	
47	Average target speed tens digit	
48	Average target speed ones digit	
49	ASCII space	0x20
50	Target Strength tens digit	
51	Target Strength ones digit	
52	ASCII space	0x20
53	Target classification	
54	ASCII space	0x20
55	Target duration thousands digit	
56	Target duration hundreds digit	
57	Target duration tens digit	
58	Target duration ones digit	
59	ASCII space	0x20
60	Carriage Return	0x0D

When LOG messages are enabled with the Enable Stats LOG Messages setting on a port, the unit generates a 60-byte ASCII message as defined above (e.g. "LOG 0015 2000/12/31 23:59:59 CLOS L040 P041 A040 19 2 0077 <cr>") for each of the targets lost in the last radar measuring period. It appends these LOG message(s) to the end of the selected standard streaming format messages. If the unit is configured for tenths resolution, a decimal point and tenths digit is added to each speed value (e.g. "LOG 0015 2000/12/31 23:59:59 CLOS L040.1 P041.3 A040.4 19 2 0077 <cr>") and each LOG message is 66 bytes long.

Due to the length of these messages and the variable number of them, the baud rate setting should be set at 115200 to ensure that all generated messages are sent before the radar processes new target information.

7 Handshake Speed Data Protocols

When a handshake (polling) protocol is selected, the Stationary Speed Sensor II sends only one speed message for each speed data request (poll) it receives from the controller.

7.1 EE Polling

The simple EE Format Request is a two byte message as shown below. The response from the Stationary Speed Sensor II is a four byte message carrying fields for live visual speed (in hexadecimal) and direction. Since there is no addressing in the request message, it is assumed that it is directed to a unit with a Stationary Speed Sensor II ID of 2; and only a unit with ID=2 responds to it.

The EE Format only reports one speed - the strongest visual speed is reported.



Refer to Users Manual for instructions on configuring the demo application to poll for EE Format responses.

7.1.1 EE Format Request (from Controller to Stationary Speed Sensor II)

Byte #	Description	Value
1	Start ID	0xEE
2	Check byte	0x12 (0xEE + 0x12 = 0 (mod 256))

7.1.2 EE Format Response (from Stationary Speed Sensor II to Controller)

Byte #	Description	Value
1	Start ID	0xEE
3	Speed	Bit 15 – valid bit (1=valid speed) Bit 14-13 – direction (11=away, 00=unknown, 01=closing) Bit 12 – unused Bit 11-0 – speed in selected units and unit resolution
4	Check byte	Bytes 1-4 sum to 0 (mod 256)

7.2 EA Polling

EA Polling Request messages are like those for EE, but they contain Destination and Source IDs as shown below. The source ID is always 1 for the controller. The destination ID can be any value in the range from 2 through 254, and only a Stationary Speed Sensor II with that address will respond. Its response to the EA poll is to send a single speed message in the streaming format selected by the Output Format setting for that port. Only those ports configured as half-duplex respond to EA polling. Full-duplex ports stream speed messages continuously.

The demo PC application does not support EA polling.

7.2.1 EA Polling Request (from Controller to Stationary Speed Sensor II)

#	Description	Value
1	Start ID	0xEA
2	Destination ID	0x02 – 0xFE (2-254)
3	Source ID	0x01
4	Check byte	Bytes 1-4 sum to 0 (mod 256)



7.3 Polled Mode for D0-D4 Formats

The D0-D4 Formats described in Section 6 may also be used in polled mode. If polled mode is selected on the desired port, sending a 3 byte poll string of “*P<cr>”, (0x2A 0x50 0x0D) causes a return of the current target speed in the selected format.

The demo PC application does not support polling in the D0-D4 formats.

8 Configuration Setting Descriptions

All the control and configuration settings available for the Stationary Speed Sensor IIs are described in this Section. Here, they are arranged in the following groups of related function.

1. Basic Configuration
2. COM Ports
3. Target Recognition
4. Target Filtering
5. Speed Presentation
6. Locking Targets
7. Real-time Clock
8. Speed Alarm
9. Traffic Statistics (stats unit only)
10. System

The tables at the beginning of each of the sections below list the settings included in each group. The Setting column shows the setting names. The ID column shows the Packet Type and ID number to be used for each setting when building a Configuration Protocol message or command (Refer to Section 10 for the protocol format).

The Default column contains the factory default values for each setting. √ in this column means that the setting is not used to configure a setting. It is used to request an action or status from the Stationary Speed Sensor II. And the Available Values column shows the possible values for each setting.

The table in Section 9 lists all the available settings in order of ID number for ease of reference.

8.1 Basic Configuration

Setting	ID	Default	Available Values
Transmitter Control	1/42	1 for standard unit; 2 for stats unit	0 = Hold 1 = Transmit 2 = Automatic (stats unit only)



ViaRadar Stationary Speed Sensor II Technical Manual

Mode	1/1	0	0 = Stationary
Target Direction	1/2	0	0 = Both 1 = Closing 2 = Away
Units	1/20	0	0 = MPH 1 = km/h 2 = knots 3 = meters/sec 4 = feet/sec
Unit Resolution	1/21	0	0 = one 1 = tenths

The X/Y notation for IDs in the table above means to use X for the Packet Type field in a Configuration Protocol command and to use Y for the Setting ID value. Refer to Section 10 for a description of the Configuration Protocol format.

The **Transmitter Control** setting (1/42) turns the radar transmitter on or off. The transmitter must be on for the radar to register speeds. The Automatic value is used in conjunction with statistics gathering. When a survey is loaded into the unit, it includes calendar settings to allow the unit to run statistics during certain time periods on certain days. When the Transmitter Control is set for Automatic, the statistics function controls the state of the transmitter by turning it off if no statistics are being gathered. This results in lower power draw and the ability run an interrupted survey for more days.

The **Mode** setting (1/1) is fixed in stationary mode (value = 0) and can be read but not changed.

The **Target Direction** setting (1/2) tells the radar to look for targets moving in certain direction(s) relative to the unit. The Target Direction values are Away to monitor receding targets only, Closing to monitor approaching targets only and Both to monitor targets moving in either direction.

The **Units** setting (1/20) selects the units of speed measurement. The available options are MPH, km/h, knots, meters/sec and feet/sec.

The **Unit Resolution** setting (1/21) can be set to report speeds in whole units, as 25, or tenths of units, as 25.4.

8.2 COM Ports

Setting	COM1 ID	COM2 ID	COM3 ID	Default	Available Values
COM1 Link Configuration	2/16	-----	-----	1	0 = 485 2W Half Duplex 1 = 485 4W Full Duplex
COM2 Link Configuration	-----	2/32	-----	0	0 = 232 No Flow Control 1 = 232 w/ Flow Control
COM3 Link Configuration	-----	-----	2/48	0	0 = Disabled 1 = 485 2W Half Duplex
Baud Rate	2/17	2/33	2/49	9	5 = 9600 baud 6 = 19200 baud



ViaRadar Stationary Speed Sensor II Technical Manual

					7 = 38400 baud 8 = 57600 baud 9 = 115200 baud
Output Format	2/18	2/34	2/50	0	0 = None (no serial output) 1 = A 2 = B 3 = D0 4 = D1 5 = D2 6 = D3 7 = D4 8 = EE 9 = Enhanced Output 10 = S 11 = DBG1 (stats unit only) 12 = BT 13 = DT
Message Period	2/19	2/35	2/51	0	0 – 10000 ms (10 sec)
Leading Zero Character	2/20	2/36	2/52	0	0 = ASCII Space (0x20) 1 = ASCII Zero (0x30)
Format A Speed	2/21	2/37	2/53	0	0 = Strong Visual Target 1 = Fast Visual Target
Zeros After Target Loss	2/22	2/38	2/54	2	0 = No Zeros 1 = One Zero 2 = Stream Zeros
Format D Direction Character	2/23	2/39	2/55	0	0 = Disabled 1 = Enabled
Format D Update On Change Only	2/24	2/40	2/56	0	0 = Disabled 1 = Enabled
Format D Zero Report	2/25	2/41	2/57	0	0 = Disabled 1 = Enabled
Format D Polled Mode	2/26	2/42	2/58	0	0 = Disabled 1 = Enabled
Statistics LOG Messages (stats unit only)	2/27	2/43	2/59	0	0 = Disabled 1 = Enabled
Statistics Record Messages (stats unit only)	2/28	2/44	2/60	0	0 = Disabled 1 = Enabled

The X/Y notation for IDs in the table above means to use X for the Packet Type field in a Configuration Protocol command and to use Y for the Setting ID value. Refer to Section 10 for a description of the Configuration Protocol format.

Use the settings in this section to configure the serial ports and the messages they transmit.

The **Link Configuration** settings (2/16, 2/32 and 2/48) have different values and meanings for the different COM ports. Refer to the Connecting to the COM Ports section for more detail on the link configurations and their inter-dependencies.



ViaRadar Stationary Speed Sensor II Technical Manual

COM1 is an RS-485 port and can be configured as a 4-wire full-duplex port or as a 2-wire half-duplex port. If COM 3 is enabled, COM1 can not be configured as a 4-wire full-duplex port.

COM2 is an RS-232 port and can be configured with no RTS/CTS hardware flow control or with the flow control signals enabled.

COM3 is always a 2-wire half-duplex port. By default it is disabled, but it can be enabled if COM1 is set up for 2-wire half-duplex operation.

After a Link Configuration setting is changed, it will immediately report its new value to the controller, but the setting does not take effect to actually change the link type until the Process Baud/Link Update command is sent. This is so that the link type does not change while communicating over the link. The new setting will also take effect after a power cycle – in this case it is unnecessary to send the Process Baud/Link Update command. Refer to the System subsection in this section for more details on the Process Baud/Link Update command.

Each COM port has its own **Baud Rate** setting (2/17, 2/33 and 2/49) which can be set in the range from 9600 to 115200 (the default). Regardless of the baud rate, the serial port is always configured for 10 bit asynchronous data with 1 start bit, 8 data bits, 1 stop bit and no parity (8N1).

After a Baud Rate setting is changed, it will immediately report its new value to the controller, but the setting does not take effect to actually change the baud rate until the Process Baud/Link Update command is sent. This is so that the baud rate does not change while communicating over the link. The new setting will also take effect after a power cycle – in this case it is unnecessary to send the Process Baud/Link Update command. Refer to the System subsection in this section for more details on the Process Baud/Link Update command.

The Stationary Speed Sensor II can transmit speed and status messages out the serial port in different formats for different applications. The **Output Format** setting (2/18, 2/34 and 2/50 for the three COM ports) selects the format for transmitted messages. Refer to Appendices A and B for more details on the message contents for different formats.

A half-duplex RS-485 port cannot be configured to stream out continuous speed data because it would never be able to receive a command from the controller over the same pair of wires. For this reason, half-duplex ports are limited to the EE and EA handshaking protocols described in Section 7 and only send out a speed message when requested (or polled) by the controller.

A full-duplex port (RS-232 or RS-485) continuously streams out messages in any format described in Section 6. It can also respond to EE and D0-D4 polling described in Section 7 – but not EA polling.

When configured for a streaming message format, the Stationary Speed Sensor II sends a message each time the radar generates new internal speed measurements – about 21 times per second or every 48 milliseconds. This is the default, and fastest, rate for streaming messages. If that rate is too fast for a user's application, it can be slowed down using the **Message Period** setting (2/19, 2/35 and 2/51 for the three ports). With a range of 0 to 10,000 milliseconds, a delay of up to 10 seconds can be configured for the time between the beginning of one message and the next. This feature is only applicable for full-duplex ports which can stream data.

It is important to note that the sensor only has an opportunity to send a new message at its internal operating rate of once per 48 ms. That means any value for this setting between 0



ViaRadar Stationary Speed Sensor II Technical Manual

and 48 results in a 48 ms period. Any value between 49 and 96 results in a 96 ms period. Generalizing, whatever actual value is selected for this setting results in messages sent out at a rate of the next higher multiple of 48 ms.

The **Leading Zero Character** setting (2/20, 2/36 and 2/52 for the three ports) defines the character used for leading zeros on speeds in ASCII visual speed message formats (A, B, D0-D3 and S). It can be set = 0 for a space character (ASCII 0x20) or = 1 for a zero character (ASCII 0x30). Examples below show how different numbers would appear on a speed sign or print-out.

Space – ASCII spaces are used for leading zero characters

“500”

“ 50”

“ 5”

“ ”

Zero – ASCII zeros are used for leading zero characters

“500”

“050”

“005”

“000”

The **Format A Speed** setting (2/21, 2/37 and 2/53 for the three ports) determines what speed will be reported in the A Format messages: either the Strong visual target or the Fast visual target. It only applies when the Output Format setting is for the A Format.

Use the **Zeros After Target Loss** setting (2/22, 2/38 and 2/54 for the three ports) to configure what, if any, streaming messages are sent when no target is present. After a target is lost and when no valid speeds are detected, the Stationary Speed Sensor II by default streams messages with speed values set to zero. As an option, a port can be configured to stop streaming messages completely after the last valid message until a new target is acquired. A third option sends one “zero speed” message after the last valid message before halting the message stream. This single message might be used to clear a speed board after the last speed was displayed.

Beware of changing the Zeros After Target Loss setting from the default “streaming” value. When no target is present and the Stationary Speed Sensor II is not transmitting any serial data, the link can appear broken or dead.

The D0, D1, D2 and D3 formats have a field for an ASCII direction character. It indicates “+” for an approaching target, “-” for a receding target or “?” if the direction can not be determined. Enable or disable this byte in the message using the **Format D Direction Character** setting (2/23, 2/39 and 2/55 for the three ports).

When streaming in any of the D0-D4 formats, another way to reduce speed message traffic on the link is to send a message only when the new speed reading is different from the last. Enable or disable this feature with the **Format D Update On Change Only** setting (2/24, 2/40 and 2/56 for the three ports). When it is enabled and there are no targets, the Stationary Speed Sensor II does not send out any speed messages, and the link may appear dead.

To turn on a “keep-alive” signal from the unit, enable the **Format D Zero Report** setting (2/25, 2/41 and 2/57 for the three ports) to configure it to send a zero-speed message



ViaRadar Stationary Speed Sensor II Technical Manual

every 2 seconds when no target is present. These two settings are limited to a port configured for the D0, D1, D2, D3 or D4 Format.

One last feature that the D0-D4 Formats share is that they can operate in polled mode like the EE Format. When the **Format D Polled Modes** setting (2/26, 2/42 and 2/58 for the three ports) is enabled, a speed message is only transmitted after the Stationary Speed Sensor II receives a poll message from the controller. The poll is “*P” followed by a carriage return (in hex: 0x2A, 0x50, 0x0D). No messages are automatically streamed out when this setting is enabled.

When the stats sensor unit is tracking targets and gathering statistics, enabling the **Statistics LOG Messages** setting (2/27, 2/43 and 2/59 for the three ports) configures the sensor to append ASCII strings to the end of standard streaming messages. These strings identify targets that were lost from tracking in the last radar measurement period – this is the point at which a target is included in the statistics counts.

This feature is especially effective when used in conjunction with the DBG1 streaming format. The DBG1 format streams out strings of data after each 48 ms processing period for each target being tracked. Monitoring this data can tell a user how many targets are being tracked; what their latest, fastest and average speeds are; and how long they have been tracked. In the streamed data for the period following the loss of one or more targets, LOG messages will be appended to show the final data for each lost target as it is saved in the statistics gathering function.

Use the **Statistics Record Messages** setting (2/28, 2/44 and 2/60 for the three ports) on the stats unit to enable raw statistics records to be streamed out a port when they are generated – normally on a 1, 2, 5, 10, 30 or 60 minute period. These messages are only generated if the survey is configured for External data. Refer to the Traffic Statistics section for more detail on tracking, gathering and storing statistics data.

8.3 Target Recognition

Setting	ID	Default	Available Values
Faster Target Tracking	1/13	1	0 = Disabled 1 = Enabled
Sensitivity	1/4	16	0 (min) – 16 (max)
Target Acquisition Density	1/55	70	0 – 100%
Target Acquisition Span	1/122	500	1 – 2000 ms (2 sec)
Target Loss Density	1/62	0	0 – 100%
Target Loss Span	1/123	500	1 – 2000 ms (2 sec)
Visual Target Strength Sensitivity	1/85	99	1 (min) – 99 (max)
Stats Target Strength Sensitivity (stats unit only)	1/120	50	1 (min) – 99 (max)

The X/Y notation for IDs in the table above means to use X for the Packet Type field in a Configuration Protocol command and to use Y for the Setting ID value. Refer to Section 10 for a description of the Configuration Protocol format.



ViaRadar Stationary Speed Sensor II Technical Manual

Before covering the settings used to adjust the target recognition features of the Stationary Speed Sensor II, a more detailed definition of “target” is needed. The base sensor unit has only one type of targets: **Visual Targets**. The sensor unit with stats identifies two different types of targets: **Visual Targets** and **Stats Targets**.

Visual Targets are the targets that might display on a “Your Speed Is” sign on the side of the road. The speed of a target far from the radar/sign and at the distant edge of the radar’s range may flicker on the display until it gets close enough to the radar for solid recognition. Basically, the radar reports what it actually detects in real time for Visual Targets. Strong targets, fast targets and locked targets reported in speed messages are of the Visual Target type.

When the sensor with stats is counting targets for statistics, it should count each target only once. After the radar sees a Stats Target for the first time, it needs to “hold on to it” until it completely disappears from the radar’s view – without the target dropping out and reappearing. For this and other reasons, Stats targets are treated differently in the radar processing. Last speed, peak speed and average speed reported in statistics messages are of the Stats Target type.

The **Faster Target Tracking** setting (1/13) allows acquisition and tracking of a faster visual target when a slower target has already been acquired as the strong visual target. An example of a time when this capability is helpful is when a small car is passing a large truck. The truck is reported as the main target because of its larger size. The car is then reported as the fast target.

Sensitivity (1/4) is the main setting used by the radar affecting target recognition. With a higher sensitivity, the Stationary Speed Sensor II looks as far away as possible for targets and gives the unit its highest performance. It is also able to “see” smaller targets. Use lower sensitivity for targets closer to the unit and when you want to restrict it from seeing smaller objects or objects farther out in the background. The value of this setting affects recognition of both visual targets and stats targets.

The range of values for this setting is 0 through 16. Use 16 for maximum sensitivity and 1 for minimum sensitivity. A sensitivity setting of 0 allows no target acquisition at all.

Standard radar operation reports a target speed when analysis of its most recent data results in a target meeting the sensitivity requirements outlined above. Once a target is acquired, it is tracked until it no longer meets those requirements.

The Target Acquisition and Loss settings give more control over the criteria used to acquire and then lose a target. They affect recognition of both visual and stats targets.

The **Target Acquisition Density** and **Target Acquisition Span** settings (1/55 and 1/122) are used as a pair to affect when the radar acquires a target. The Density value specifies a percentage (0-100), and the Span value specifies a length of time (0-2000 ms). As an example, using values of 70% and 500 ms configure a sensor to acquire a target only after it sees it 70% of the time over any half-second period.

The **Target Loss Density** and **Target Loss Span** settings (1/62 and 1/123) are used in a similar way to tell the radar when it should lose a target. For example, values of 0% and 500 ms tell it to hold on to a target until it doesn’t see it at all (0% of the time) for a full half-second.

Whereas the Sensitivity setting described above compares the target strength to the ambient noise from other radar reflections (signal to noise ratio) to declare recognition of a



target, the Target Strength Sensitivity settings can be used to recognize or suppress targets depending purely on the target's strength. A higher value allows smaller, lower strength targets to be acquired. A lower value requires the target to be larger/closer before it is acquired.

The **Visual Target Strength Sensitivity** setting (1/85) only affects recognition of visual targets, and the **Stats Target Strength Sensitivity** setting (1/120) only affects recognition of stats targets.

8.4 Target Filtering

Setting	ID	Default	Available Values
Low Speed Threshold	1/7	0	0 - 322
High Speed Threshold	1/11	200	0 - 322

The X/Y notation for IDs in the table above means to use X for the Packet Type field in a Configuration Protocol command and to use Y for the Setting ID value. Refer to Section 10 for a description of the Configuration Protocol format.

Several settings can be used to filter out undesired targets. The first step is to ignore targets that are not moving in the desired direction. This is accomplished with the **Target Direction** setting (1/2) as described in the first subsection of this section, Basic Configuration.

Slow target speeds can be filtered out using the **Low Speed Threshold** setting (1/7). The range of values for this setting is 0 through 322. Any targets with a speed slower than this threshold are ignored. This feature can be helpful when monitoring traffic around slow moving objects like pedestrians or trees blowing in the wind.

In a like manner, fast target speeds can be filtered out using the **High Speed Threshold** setting (1/11) which also has a range of 0-322. Targets with speeds higher than this threshold are also ignored. It is important to set the High Speed Threshold higher than the Low Speed Threshold or else all targets will be ignored.

8.5 Speed Presentation

Setting	ID	Default	Available Values
Cosine Angle 1	1/18	0	0-45 degrees (1° increments)
Cosine Angle 2	1/19	0	0-45 degrees (1° increments)
Holdover Time	1/88	2	0 - 10 = 0 - 10 second 11 = Forever


The X/Y notation for IDs in the table above means to use X for the Packet Type field in a Configuration Protocol command and to use Y for the Setting ID value. Refer to Section 10 for a description of the Configuration Protocol format.

The internal measurements made by the radar are corrected and/or held after target loss depending on the settings in this section.



ViaRadar Stationary Speed Sensor II Technical Manual

Stationary Speed Sensor IIs measure the most accurate speeds when targets are moving directly toward or away from them. Unfortunately, it is usually not advisable to mount one directly in the path of traffic. As with any radar, aiming at an angle results in lower speeds. At slight angles the error is very small; however at larger angles the error can become substantial.

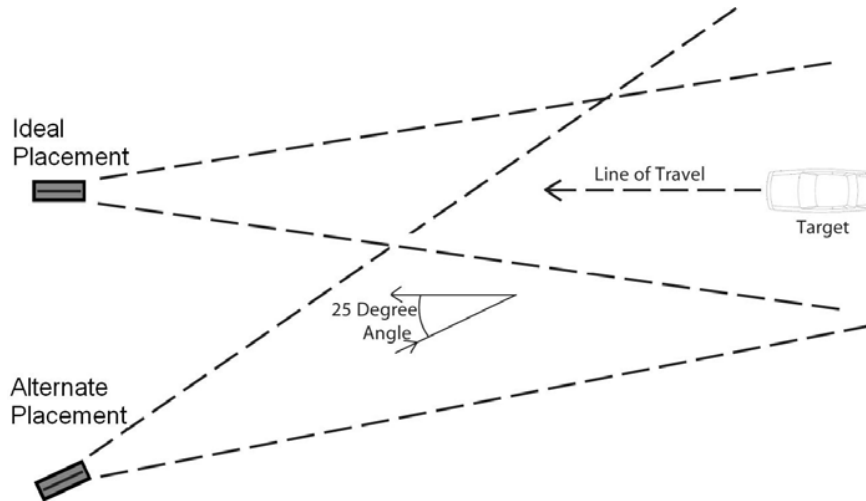

These low speeds can be automatically corrected by the sensor using the **Cosine Angle** settings (1/18 and 1/19). Two settings are provided so two corrections can be made simultaneously. The two settings are independent and interchangeable. Either one can be used by itself or with the other as a pair. One cosine angle setting might be used for the horizontal “beside-the-road” angle shown in the diagram above. The other might be set for the vertical “over-the-road” angle if the Stationary Speed Sensor II is mounted on a pole. When the aim of the radar is aligned with the target’s path, both angles should be set for 0 degrees, and no correction takes place. The range of these settings is 0-45 degrees.

The **Holdover Time** setting (1/88) is used to smooth the speed readings during intermittent dropouts. It only affects visual targets (not stats targets). When the unit is configured for a streaming message format, a message is transmitted out the COM port for each radar measurement period – every 48ms. The radar returns a speed of zero if it is unable to determine a valid speed for any given measurement time. When conditions are noisy or when the target is very small and almost out of range, these missed measurements (or dropouts) can make the series of speed reports appear erratic or jumpy. Rather than interjecting dropouts in the series for invalid speeds, the last valid reading can be repeated (or held over) to provide continuity for noisy, intermittent targets. The Holdover Time setting can be set for 0-10 seconds in 1 second increments, or it can be set to Forever to hold the last speed the radar saw until a new one is acquired.

8.6 Locking Targets

Setting	ID	Default	Available Values
Strong Lock Enable	1/15	1	0 = Disabled



ViaRadar Stationary Speed Sensor II Technical Manual

			1 = Enabled
Fast Lock Enable	1/14	1	0 = Disabled 1 = Enabled
Strong Lock	1/43	0	0 = Release 1 = Lock
Fast Lock	1/44	0	0 = Release 1 = Lock

The X/Y notation for IDs in the table above means to use X for the Packet Type field in a Configuration Protocol command and to use Y for the Setting ID value. Refer to Section 10 for a description of the Configuration Protocol format.

While monitoring a target's visual speed, the sensor can "lock-in" the speed at any point in time while still tracking the changing speed of the target (track-through lock). Either the speed of the strong visual target or the fast visual target can be locked but not both at the same time. Stats targets cannot be locked. To monitor locked targets, use the B or Enhanced Output Format which have fields to report the locked speed.

The **Strong Lock Enable** setting (1/15) disables or enables the locking feature for strong visual targets. If locking of fast visual targets is desired, in addition to enabling Faster Target Tracking as described in the Target Recognition subsection of this section, the **Fast Lock Enable** setting (1/14) must also be enabled.

Lock and release speeds using the **Strong Lock** (1/43) and **Fast Lock** (1/44) commands. The current locked speed, strong or fast, must be released before any other speed can be locked.

8.7 Real-time Clock

Setting	ID	Default	Available Values
RTC Calibration Factor	1/106	0x80	0x80 - 0xC8
RTC Year	1/107	none	2000 - 2399
RTC Month	1/108	none	1 - 12
RTC Date	1/109	none	1 - 31
RTC Hour	1/110	none	00 - 23
RTC Minute	1/111	none	00 - 59
RTC Second	1/112	none	00 - 59
RTC Fractional Second	1/113	none	0 - 99
RTC Weekday	1/124	none	1 (Monday) - 7 (Sunday)

The X/Y notation for IDs in the table above means to use X for the Packet Type field in a Configuration Protocol command and to use Y for the Setting ID value. Refer to Section 10 for a description of the Configuration Protocol format.

The real-time clock in the sensor has an internal battery and keeps the current time and date whether the unit is powered up or not. The following settings can be changed or read to set or get the current time and date:

The **RTC Calibration Factor** setting (1/106) accepts values between 128 (0x80) and 200 (0xC8). A higher value will speed up the clock and a lower value will slow it down.



The **RTC Year** setting (1/107) holds a value between 2000 and 2399.
 The **RTC Month** setting (1/108) holds a value between 1 and 12.
 The **RTC Date** setting (1/109) holds the day of month value between 1 and 31.
 The **RTC Hour** setting (1/110) holds a 24 hour clock value between 0 and 23.
 The **RTC Minute** setting (1/111) holds a value between 0 and 59.
 The **RTC Second** setting (1/112) holds a value between 0 and 59.
 The **RTC Fractional Second** setting (1/113) holds a value between 0 and 99 representing 0 to 0.99 seconds.
 The **RTC Weekday** setting (1/124) holds the day of week value between 1 and 7 where 1=Monday and 7=Sunday.

8.8 Speed Alarm

Setting	ID	Default	Available Values
Speed Alarm Enable	1/16	0	0 = Disable 1 = Enabled
Alarm Speed Threshold	1/12	322	0 - 322

The X/Y notation for IDs in the table above means to use X for the Packet Type field in a Configuration Protocol command and to use Y for the Setting ID value. Refer to Section 10 for a description of the Configuration Protocol format.

The Stationary Speed Sensor II can provide a speed alarm when a visual strong target is traveling faster than a preset alarm threshold. The **Speed Alarm Enable** setting (1/16) enables or disables the feature. Refer to the Connecting the Stationary Speed Sensor II/Auxiliary Relay Connections section for details on the physical connection of the AUX contacts used for the speed alarm.

When the Speed Alarm feature is enabled, use the **Alarm Speed Threshold** setting (1/12) to set up the target speed where the speed alarm activates. The range of values for this setting is 0-322. When a strong visual target is traveling faster than this threshold, the state of the AUX contacts changes from an open circuit to a contact closure.

8.9 Traffic Statistics (stats unit only)

Setting	ID	Default	Available Values
Statistics Monitor	1/9	1	0 = Disable 1 = Enabled
Minimum Tracked Distance	2/4	200	0 - 500 feet
Classification Training	2/96	0	0 = Disable 1 = Enabled
Training Status	2/97	0	0 = Incomplete 1 = Complete
Get Training Data	2/98	√	1 = Request current status of training data



ViaRadar Stationary Speed Sensor II Technical Manual

			(read only)
Away Class 1 Threshold	2/99	84	0 - 99
Away Class 2 Threshold	2/100	68	0 - 99
Away Class 3 Threshold	2/101	53	0 - 99
Away Class 4 Threshold	2/102	37	0 - 99
Away Class 5 Threshold	2/103	0	0 - 99
Closing Class 1 Threshold	2/104	84	0 - 99
Closing Class 2 Threshold	2/105	68	0 - 99
Closing Class 3 Threshold	2/106	53	0 - 99
Closing Class 4 Threshold	2/107	37	0 - 99
Closing Class 5 Threshold	2/108	0	0 - 99

The X/Y notation for IDs in the table above means to use X for the Packet Type field in a Configuration Protocol command and to use Y for the Setting ID value. Refer to Section 10 for a description of the Configuration Protocol format.

The Stationary Speed Sensor II model with stats can count vehicles and store statistics on their speeds and classifications over time. Most of the user interface for the statistics functions is provided in the StalkerSTATS PC application, but some functions can be handled with these settings.

The **Statistics Monitor** setting (1/9) turns on or off the basic statistics gathering functions. It must be enabled for statistics to be counted.

The **Minimum Tracked Distance** setting (2/4) can be used to filter out some short-lived targets during a survey. An ideal survey location would not have intersecting streets or driveways along the path of the surveyed vehicles, but sometimes this cannot be avoided. To keep from counting vehicles that only travel a portion of the survey path by turning onto or off of the roadway, set the Minimum Tracked Distance for a distance (in feet) that a target needs to travel to be counted in the survey. The range of settings is 0-500 feet with a default of 200 feet.

One of the qualities of stats targets is their classification: Class 1 (larger targets) through Class 5 (smaller targets). The sensor determines a target's class based on the amount of initial transmitted radar energy that bounces off the target and is returned to the sensor. This returned energy depends not only on the physical size of the target but also the target's shape, surface topography and physical bearing to the radar. In some cases, a large target may return less energy than a smaller target. So while target classes may not correlate exactly to different types of vehicles, Class 1 targets appear relatively larger to the radar than Class 2 and so on.

The sensor calculates the intensity, in the range 1-99, of the returned radar signal for each target it tracks. It then assigns a Class depending on where that intensity falls in the range of Class Thresholds. The ten thresholds are split into five for **Away Class n Threshold** settings (2/99 - 2/103) and five for **Closing Class n Threshold** settings (2/104 - 2/108). There are separate sets of thresholds for closing vs. away targets because the radar may be set up on one side of a roadway, and closing targets look different to it than away targets which travel at more of an angle to the radar. Other installation locations provide similar differences.



ViaRadar Stationary Speed Sensor II Technical Manual

There are default settings for the thresholds, but they may be set to any level by the user, or the unit may train itself for the range of targets it sees in a particular installation. This is accomplished by setting up the radar on a survey site and turning on the **Classification Training** setting (2/96). The radar will then monitor the next 100 targets it sees, calculate the intensity range of those targets, and then automatically set the thresholds evenly spaced within that range. This training gives reasonable assurance that the statistics survey will provide results with targets spread throughout the class range. Note that if the unit is configured for only one direction of traffic, Away or Closing, it only tracks 100 targets moving in that direction. If it is set up for Both directions, it tracks 100 away targets to determine the Away Thresholds and 100 closing targets for the Closing Thresholds.

As soon as the Classification Training is enabled, the **Training Status** setting (2/97) is automatically set to Incomplete. After the training is complete, the Classification Training setting is automatically disabled, the Training Status is automatically set to Complete, and the Class Threshold settings are updated with the newly calculated thresholds.

While training is in progress, it is possible to monitor how many of the 100 targets have been registered and their intensities. After receiving the **Get Training Data** command (2/98), the unit responds by sending out an ASCII stream of data: an "A" followed by the intensities of the 100 Away targets and then a "C" followed by the 100 Closing intensities. The intensities are initially reported as 0 and are then replaced by the intensities of actual targets as they are tracked.

The training settings are remembered through power cycles, so it is possible to configure the unit to train and power it down before going out to the survey site. Then, on-site, simply aim the unit and power it up. It will then automatically start to train as it sees targets. After completion of training, it then automatically starts to gather statistics based on the trained classification thresholds. The targets monitored during the training period are not included in the statistics counts.



8.10 System

Setting	ID	Default	Available Values
Reset Unit	1/84	√	1 = Request a reset of the unit
Force Product Defaults	1/74	0	0 = No Action 1 = Force Settings
Process Baud/Link Update	2/3	0	0 = No Update 1 = Update
Get Product ID	1/37	√	1 = Request the Product ID (read only)
Get Product Type	1/79	√	1 = Request the Product Type (read only)
Get Software Version	1/81	√	1 = Request the Software Version (read only)
Get Hardware ID	1/82	√	1 = Request the Hardware ID (read only)

The X/Y notation for IDs in the table above means to use X for the Packet Type field in a Configuration Protocol command and to use Y for the Setting ID value. Refer to Section 10 for a description of the Configuration Protocol format.

The “Get” settings (or commands) in this section are used to query the Stationary Speed Sensor II for information about itself. The values cannot be changed by the user; they are constant and depend on the model of the unit and version of software loaded into it.

To reset a unit, send the **Reset Unit** command (1/84) with a value of 1. This causes the unit to reset itself after a ten second delay. No settings are changed, but the unit is restarted.

Use the **Force Product Defaults** command (1/74) to return a unit to a known state. All settings are reset to the default values as shown in this section.

The **Process Baud/Link Update** command (2/3) is used after the Link Configuration and Baud Rate commands as described in the COM Ports subsection in this section. Since both of those commands change basic link properties, if the sensor acted on them immediately after receiving them, its response would be in a different baud rate or the link type would change before the response goes out. The consequences could be worse if a controller tries to change multiple settings (as happens with the Dashboard demo PC app) with a baud rate or link type change in the middle of the sequence of commands: the first commands would go through successfully, but any commands after the baud rate or link type changed would not.

Once any baud rate or link configuration settings have been changed without actually affecting the communications link, sending the Process Baud/Link Update command with a value of 1 makes those changes take effect. On receiving the command, the unit will immediately reconfigure the port (or ports if more than one COM port is changed) and send its response in the new baud rate and/or over the new link type. After sending the command, the PC/controller should expect these changes and reconfigure its own configuration on its side of the link.

If the user has access to the sensor’s power and can turn it on and off, use of the Process Baud/Link Update command is not necessary. After any baud rate or link type settings have been changed, simply turning the unit off and back on will make the new settings take effect.



A Stationary Speed Sensor II responds to a **Get Product ID** command (1/37) with an ASCII string containing the product model name and the version of software loaded into it. An example is “Stationary II Ver: 1.1.0”.

The response to a **Get Product Type** command (1/79) is a three byte hexadecimal value associated with the model of the Stationary Speed Sensor II. The values are:

0x52A200 Stationary II Speed Sensor
 0xFEDB0B Stationary II Speed Sensor with Stats

The **Get Software Version** command (1/81) returns an ASCII string with the loaded software’s version. e.g. “1.0.0.0”

The **Get Hardware ID** command (1/82) returns a 32-byte ASCII string with the internal Hardware ID unique to each sensor.

9 Configuration Settings Table

All of the settings available for the Stationary Speed Sensor II are listed below in numerical order of the **Setting IDs** which are shown in decimal and hexadecimal format.

The **Setting Description** column shows the setting names. It also has references to the subsection in Section 8 where the setting is described in detail.

Packet Type	Setting ID		Setting Description
	Dec	Hex	
1	1	0x01	Mode 1 – Basic Configuration
1	2	0x02	Target Direction 1 – Basic Configuration
1	4	0x04	Sensitivity 3 – Target Recognition
1	7	0x07	Low Speed Threshold 4 – Target Filtering
1	9	0x09	Statistics Monitor (stats unit only) 9 – Traffic Statistics
1	11	0x0B	High Speed Threshold 4 – Target Filtering
1	12	0x0C	Alarm Speed Threshold 8 – Speed Alarm
1	13	0x0D	Faster Target Tracking 3 – Target Recognition
1	14	0x0E	Fast Lock Enable 6 – Locking Targets
1	15	0x0F	Strong Lock Enable 6 – Locking Targets



ViaRadar Stationary Speed Sensor II Technical Manual

1	16	0x10	Speed Alarm Enable 8 - Speed Alarm
1	18	0x12	Cosine Angle 1 5 - Speed Presentation
1	19	0x13	Cosine Angle 2 5 - Speed Presentation
1	20	0x14	Units 1 - Basic Configuration
1	21	0x15	Unit Resolution 1 - Basic Configuration
1	37	0x1F	Get Product ID 10 - System
1	42	0x2A	Transmitter Control 1 - Basic Configuration
1	43	0x2B	Strong Lock 6 - Locking Targets
1	44	0x2C	Fast Lock 6 - Locking Targets
1	55	0x37	Target Acquisition Density 3 - Target Recognition
1	62	0x3E	Target Loss Density 3 - Target Recognition
1	74	0x4A	Force Product Defaults 10 - System
1	79	0x4F	Get Product Type 10 - System
1	81	0x51	Get Software Version 10 - System
1	82	0x52	Get Hardware ID 10 - System
1	84	0x54	Reset Unit 10 - System
1	85	0x55	Visual Target Strength Sensitivity 3 - Target Recognition
1	88	0x58	Holdover Time 5 - Speed Presentation
1	106	0x6A	RTC Calibration Factor 7 - Real-time Clock
1	107	0x6B	RTC Year 7 - Real-time Clock
1	108	0x6C	RTC Month 7 - Real-time Clock
1	109	0x6D	RTC Date 7 - Real-time Clock
1	110	0x6E	RTC Hour 7 - Real-time Clock
1	111	0x6F	RTC Minute 7 - Real-time Clock
1	112	0x70	RTC Second 7 - Real-time Clock
1	113	0x71	RTC Fractional Second 7 - Real-time Clock
1	120	0x78	Stats Target Strength Sensitivity (stats unit only) 3 - Target Recognition



ViaRadar Stationary Speed Sensor II Technical Manual

1	122	0x7A	Target Acquisition Span 3 - Target Recognition
1	123	0x7B	Target Loss Span 3 - Target Recognition
1	124	0x7C	RTC Weekday 7 - Real-time Clock
2	3	0x03	Process Baud/Link Update 10 - System
2	4	0x04	Minimum Tracked Distance (stats unit only) 10 - Traffic Statistics
2	16	0x10	COM1 Link Configuration 2 - COM Ports
2	17	0x11	COM1 Baud Rate 2 - COM Ports
2	18	0x12	COM1 Output Format 2 - COM Ports
2	19	0x13	COM1 Message Period 2 - COM Ports
2	20	0x14	COM1 Leading Zero Character 2 - COM Ports
2	21	0x15	COM1 Format A Speed 2 - COM Ports
2	22	0x16	COM1 Zeros After Target Loss 2 - COM Ports
2	23	0x17	COM1 Format D Direction Character 2 - COM Ports
2	24	0x18	COM1 Format D Update On Change Only 2 - COM Ports
2	25	0x19	COM1 Format D Zero Report 2 - COM Ports
2	26	0x1A	COM1 Format D Polled Mode 2 - COM Ports
2	27	0x1B	COM1 Statistics LOG Messages (stats unit only) 2 - COM Ports
2	28	0x1C	COM1 Statistics Record Messages (stats unit only) 2 - COM Ports
2	32	0x20	COM2 Link Configuration 2 - COM Ports
2	33	0x21	COM2 Baud Rate 2 - COM Ports
2	34	0x22	COM2 Output Format 2 - COM Ports
2	35	0x23	COM2 Message Period 2 - COM Ports



ViaRadar Stationary Speed Sensor II Technical Manual

2	36	0x24	COM2 Leading Zero Character 2 – COM Ports
2	37	0x25	COM2 Format A Speed 2 – COM Ports
2	38	0x26	COM2 Zeros After Target Loss 2 – COM Ports
2	39	0x27	COM2 Format D Direction Character 2 – COM Ports
2	40	0x28	COM2 Format D Update On Change Only 2 – COM Ports
2	41	0x29	COM2 Format D Zero Report 2 – COM Ports
2	42	0x2A	COM2 Format D Polled Mode 2 – COM Ports
2	43	0x2B	COM2 Statistics LOG Messages (stats unit only) 2 – COM Ports
2	44	0x2C	COM2 Statistics Record Messages (stats unit only) 2 – COM Ports
2	48	0x30	COM3 Link Configuration 2 – COM Ports
2	49	0x31	COM3 Baud Rate 2 – COM Ports
2	50	0x32	COM3 Output Format 2 – COM Ports
2	51	0x33	COM3 Message Period 2 – COM Ports
2	52	0x34	COM3 Leading Zero Character 2 – COM Ports
2	53	0x35	COM3 Format A Speed 2 – COM Ports
2	54	0x36	COM3 Zeros After Target Loss 2 – COM Ports
2	55	0x37	COM3 Format D Direction Character 2 – COM Ports
2	56	0x38	COM3 Format D Update On Change Only 2 – COM Ports
2	57	0x39	COM3 Format D Zero Report 2 – COM Ports
2	58	0x3A	COM3 Format D Polled Mode 2 – COM Ports



2	59	0x3B	COM3 Statistics LOG Messages (stats unit only) 2 – COM Ports
2	60	0x3C	COM3 Statistics Record Messages (stats unit only) 2 – COM Ports
2	96	0x60	Classification Training (stats unit only) 9 – Traffic Statistics
2	97	0x61	Training Status (stats unit only) 9 – Traffic Statistics
2	98	0x62	Get Training Data (stats unit only) 9 – Traffic Statistics
2	99	0x63	Away Class 1 Threshold (stats unit only) 9 – Traffic Statistics
2	100	0x64	Away Class 2 Threshold (stats unit only) 9 – Traffic Statistics
2	101	0x65	Away Class 3 Threshold (stats unit only) 9 – Traffic Statistics
2	102	0x66	Away Class 4 Threshold (stats unit only) 9 – Traffic Statistics
2	103	0x67	Away Class 5 Threshold (stats unit only) 9 – Traffic Statistics
2	104	0x68	Closing Class 1 Threshold (stats unit only) 9 – Traffic Statistics
2	105	0x69	Closing Class 2 Threshold (stats unit only) 9 – Traffic Statistics
2	106	0x6A	Closing Class 3 Threshold (stats unit only) 9 – Traffic Statistics
2	107	0x6B	Closing Class 4 Threshold (stats unit only) 9 – Traffic Statistics
2	108	0x6C	Closing Class 5 Threshold (stats unit only) 9 – Traffic Statistics

10 Configuration Protocol

Refer to the chapter on Custom Applications to Control Stationary Speed Sensor IIs for details on using this protocol to control Stationary Speed Sensor IIs.

Configuration packet format



ViaRadar Stationary Speed Sensor II Technical Manual

#	Description	Value
1	Start ID	0xEF
2	Destination ID	2 - 254 (0x02 - 0xFE) For broadcast: 255 (0xFF)
3	Source ID	0x01
4	Packet Type	0x01 or 0x02
5	Payload Length (LSB)	The Payload Length is a 2-byte word which is the number of bytes starting with byte #7 through and including the last byte before the checksum bytes.
6	Payload Length (MSB)	(see above)
7	Command ID/ Setting ID	Get method: Command ID value = Setting ID in hex (and byte #9 = 0x00): causes the Speed Sensor to return the current setting Change method: Command ID value = Setting ID in hex (and byte #9 = 0x01): causes the Speed Sensor to select the next possible setting Set method: Command ID value = Setting ID in hex + 0x80: causes the Speed Sensor to use the value in byte #9 as the new configuration setting
8	Antenna Number	Reserved (use 0x00 or 0x01)
9	Configuration Value	Get method: Value = 0x00 Change method: Value = 0x01 Set method: Value = new desired value in hex (for multi-byte values, the LSB is first and is followed by the more significant bytes in low to high order)
10	Checksum (LSB)	The checksum should equal the 16-bit sum of pairs of bytes in LSB, MSB order starting with byte #1 as the first LSB through and including the last byte before the Checksum (in this case, byte #9). In the case of an odd number of bytes, 0x00 is used as the last MSB value. (See example below.)
11	Checksum (MSB)	(see above)

The following is an example showing a command to set UNITS to km/h.

#	Description	Value
1	Start ID	0xEF
2	Destination ID	0x02
3	Source ID	0x01
4	Packet Type	0x00
5	Payload Length (LSB)	0x03 (length = 0x0003 = 3 bytes)
6	Payload Length (MSB)	0x00
7	Command ID	0x94 = 0x14 (Setting 20) + 0x80 (set method)
8	Antenna Number	0x00
9	Configuration Value	0x01 (km/h)
10	Checksum (LSB)	0x88
11	Checksum (MSB)	0x03

Checksum = 0x0388 (truncated to the low order 2 bytes) = 0x02EF + 0x0001 + 0x0003 + 0x0094 + 0x0001



11 FCC Requirements

This device is approved as an intentional radiator under FCC Part 15 with FCC identifier IBQACMI007.

No additional licensing is required to operate this device.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.